



WARNING - THIS PHOTOVOLTAIC RAPID SHUTDOWN EQUIPMENT (PVRSE) DOES NOT PERFORM ALL OF THE FUNCTIONS OF A COMPLETE PHOTOVOLTAIC RAPID SHUTDOWN SYSTEM (PVRSS). THIS PVRSE MUST BE INSTALLED WITH OTHER EQUIPMENT TO FORM A COMPLETE PVRSS THAT MEETS THE REQUIREMENTS OF NEC (NFPA 70) SECTION 690.12 FOR CONTROLLED CONDUCTORS OUTSIDE THE ARRAY. OTHER EQUIPMENT INSTALLED IN OR ON THIS PV SYSTEM MAY ADVERSELY AFFECT THE OPERATION OF THE PVRSS. IT IS THE RESPONSIBILITY OF THE INSTALLER TO ENSURE THAT THE COMPLETED PV SYSTEM MEETS THE RAPID SHUTDOWN FUNCTIONAL REQUIREMENTS. THIS EQUIPMENT MUST BE INSTALLED ACCORDING TO THE MANUFACTURER'S INSTALLATION INSTRUCTIONS.




- To reduce risk of fire and shock hazard, install this device with strict adherence to National Electric Code (NEC) ANSI/NFPA 70 and/or local electrical codes. When the photovoltaic array is exposed to light, it supplies a DC voltage to the Tigo TS4 units and the output voltage may be as high as the PV module open circuit voltage (VOC) when connected to the module. The installer should use the same caution when handling electrical cables from a PV module with or without the TS4 units attached.
- Risk of electric shock: do not disassemble, or repair. There are no user serviceable parts inside. Refer servicing to qualified service personnel.
- Remove all metallic jewelry prior to installing the Tigo TS4 units to reduce the risk of contacting live circuitry. Do not attempt to install in inclement weather.
- Do not operate the Tigo TS4-X units if they have been physically damaged. Check existing cables and connectors, ensuring they are in good condition and appropriate in rating. Do not operate Tigo TS4 units with damaged or substandard wiring or connectors. Tigo TS4 units must be mounted on the high end of the PV module backsheet or racking system, and in any case above ground.
- Before installing or using the Tigo System, please read all instructions and warning markings on the Tigo products, appropriate sections of your inverter manual, photovoltaic (PV) module installation manual, and other available safety guides.
- Do not connect or disconnect under load. Turning off the inverter and/or the Tigo products may not reduce this risk. Internal capacitors within the inverter can remain charged for several minutes after disconnecting all power sources. Verify capacitors have discharged by measuring voltage across inverter terminals prior to disconnecting wiring if service is required. Wait 30 seconds after rapid shutdown activation before disconnecting DC cables or turning off DC disconnect.

- All equipment shall be installed and operated in an environment within the ratings and limitations of the equipment as published in the installation manual.
- Trained professionals must perform installation only. Tigo does not assume liability for loss or damage resulting from improper handling, installation, or misuse of products.
- All TS4-X versions ship in the ON state. Use caution when connecting the units to the modules.
- Disconnect TS4s from the array string before disconnecting from a solar module.
- Each TS4-X has an IP68 protection rating but only after properly installed.
- Do not leave TS4 connectors exposed to the rain. Water intrusion may damage the TS4.
- Connectors from different manufacturers cannot be mated with each other.
- TS4-Xs must not be installed in readily accessible locations.
- Operating temperature range is -40 °C – 85 °C (-40 °F – 185 °F).
- Storage temperature range -20 – 65 ° (-4 – 149 °F).

1. Determine Clearance

Ensure a minimum of **12.7 mm (0.5 in)** between the TS4 and the module backsheet or any obstructions such as ballasting materials or electrical equipment.

Restricted airflow around the TS4 could result in abnormal behavior.

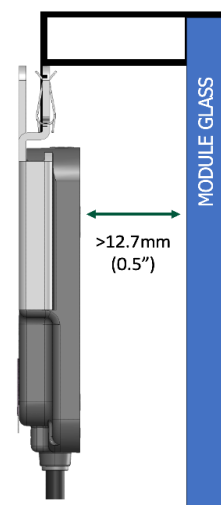


3. Connect Input Cables

CAUTION!



TS4-X are shipped in the ON state.
When connected to a module, full open circuit voltage will flow through by default!


**Always connect short input cables
before connecting long output cables
otherwise damage could occur.**

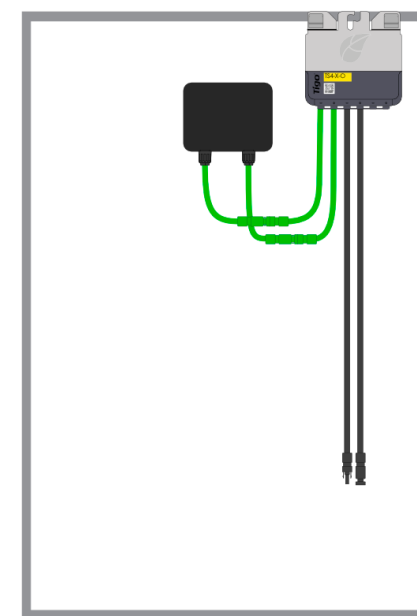

2. Mount

Frame Mounting

- Mount the TS4 to the module frame using the metal clips.
- Refer to the diagram for applicable mounting orientations.
- Ensure the TS4 serial sticker faces towards you.
- Remove serial sticker and place on site layout sheet on the last page. See Step 7.

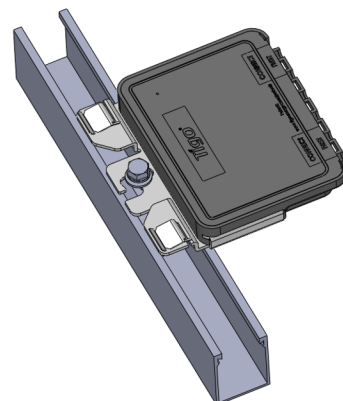


Rail Mounting

- Remove the serial sticker and place on layout sheet.
- Turn the TS4 so the label is facing towards the module backsheet.
- Bolt the TS4-X directly to the PV rail with an M8 bolt and torque to 10.2Nm.
- DO NOT CONNECT THE TS4 TOGETHER UNTIL STEP 4!**


4. Connect Output Cables

Once the TS4s are connected to a module, connect long output leads to adjacent TS4s in the string.

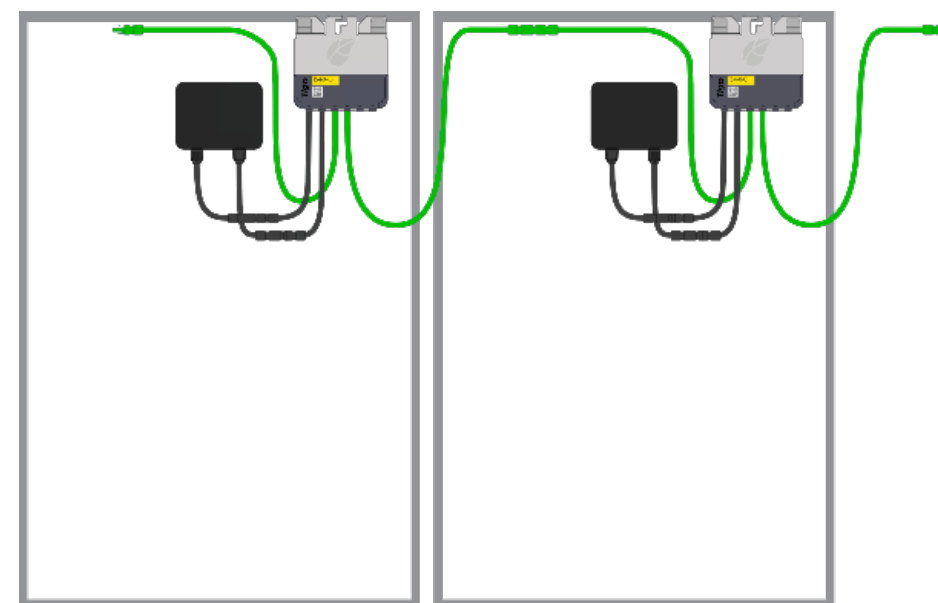



5. System Layout: TS4-X-O and TS4-X-S

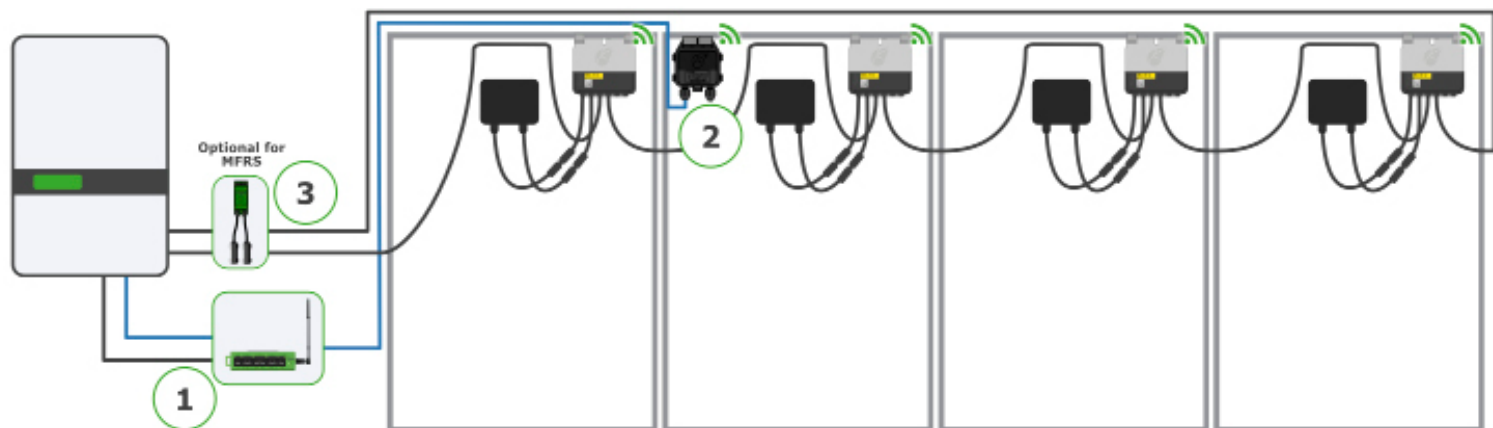


Required for the TS4-X-O and TS4-X-S:

1. Cloud Connect Advanced (CCA): a data logger/gateway connects to the cloud via Ethernet or WiFi and to other devices via Modbus.
2. Tigo Access Point (TAP): communicates wirelessly with TS4-X-A-O/S MLPE via a mesh network. It connects to the CCA via an RS485 cable.
3. Refer to the CCA/TAP QSG for installation instructions.

Optional: for Multi-Factor Rapid Shutdown (MFRS), add the RSS Transmitter (3) as shown. MFRS enables an additional layer of security for the rapid shutdown keep-alive signal sent to the TS4's. Only available with the TS4-X-O and TS4-X-S.

[Refer to the Installation, Operation & Maintenance \(IO&M\) manual for more details and design requirements on installation and commissioning.](#)

6. System Layout: TS4-X-F

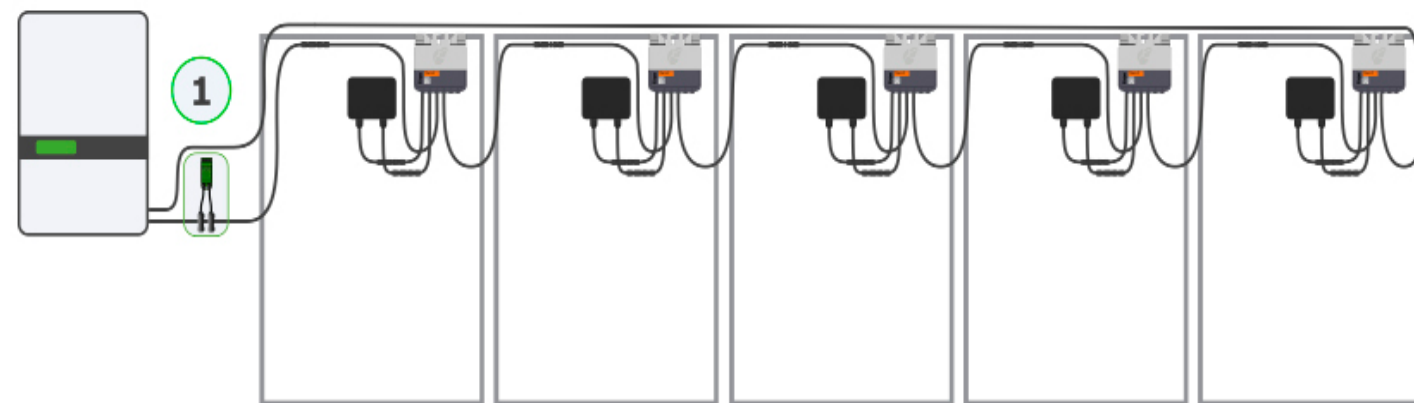

Required for the TS4-X-F:

1. The Rapid Shutdown Signal (RSS) Transmitter: provides a keep-alive signal via power-line communications (PLC) to the TS4-X-F units for rapid shutdown purposes.
2. Refer to the RSS Transmitter QSG for installation instructions.

Optional: The TS4-X-F may be upgraded to TS4-X-S for a fee.

[Refer to the Installation, Operation & Maintenance \(IO&M\) manual for more details and design requirements on installation and commissioning.](#)

Specifications

Model	Max. Power	Max. Input V	Max. Input I_{MP}	Max. Input I_{SC}	Max. System V ¹
TS4-X-O	800 W	80 V	20 A	25 A	1000/1500 V
TS4-X-S	800 W	80 V	20 A	25 A	1000/1500 V
TS4-X-F	800 W	80 V	20 A	25 A	1000/1500 V


¹ Depending on UL/IEC certification

Resources



7. Place QR Sticker on the Bulk Scan Site Map (TS4-X-O and TS4-X-S)

Remove the QR sticker and affix it to the site map in the same physical array position.

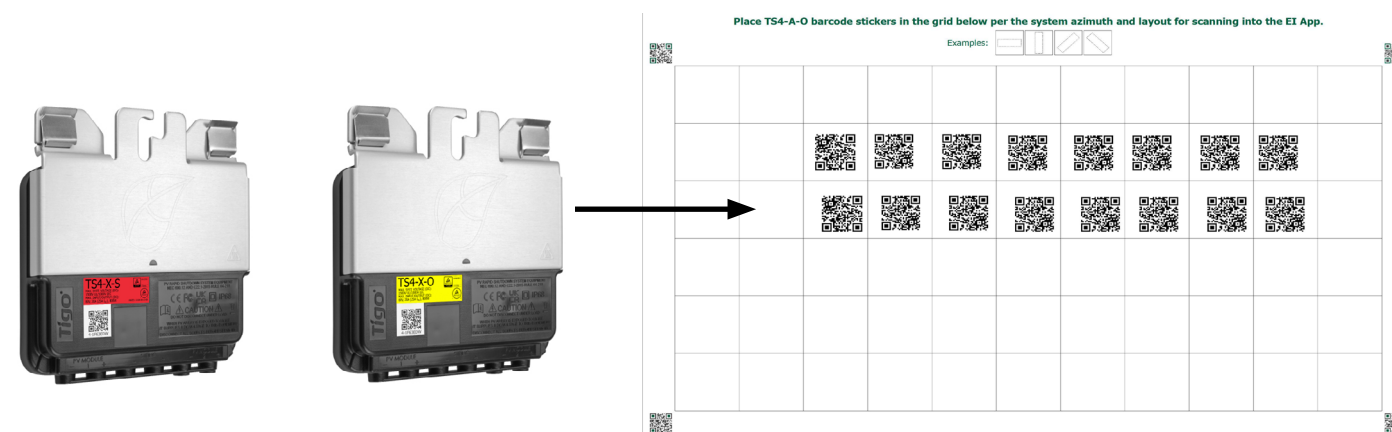



TS4-X

Bulk Scan Site Map

System:

Location:

Date:

Remove QR sticker from TS4-Xs and place on layout sheet.
Place TS4 serial stickers on the map per the system azimuth and layout for EI App scanning.
Use only 1 sticker per square. Ensure at least one Tigo QR code (located in the corners) is visible when scanning the serial stickers.

Acceptable Positions

